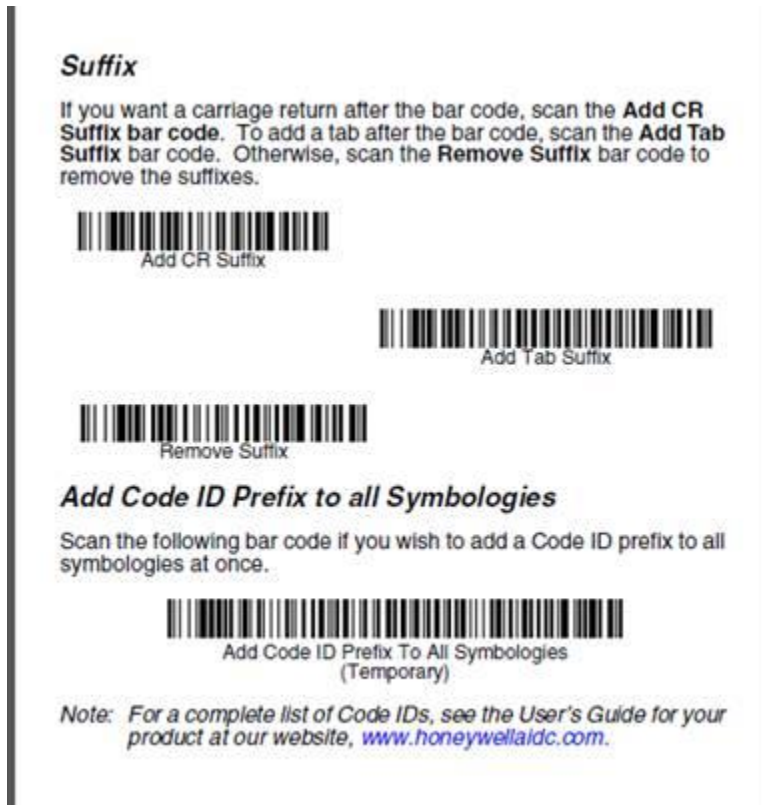

1300G Barcode Scanner Setup

Here is the screen shot of the booklet that comes with the 1300g. There are two things you need to scan for the scanner to work with AIMsi.


Scan the “Remove Suffix” and then “Add CR Suffix”


(Note: you will need to print this out to scan)




Suffix

If you want a carriage return after the bar code, scan the **Add CR Suffix bar code**. To add a tab after the bar code, scan the **Add Tab Suffix bar code**. Otherwise, scan the **Remove Suffix bar code** to remove the suffixes.



Add CR Suffix


Add Tab Suffix


Remove Suffix

Add Code ID Prefix to all Symbologies

Scan the following bar code if you wish to add a Code ID prefix to all symbologies at once.


Add Code ID Prefix To All Symbologies
(Temporary)

Note: For a complete list of Code IDs, see the User's Guide for your product at our website, www.honeywellaidc.com.